


LBB 4440/00 Supervision Control Board

www.boschsecurity.com



BOSCH
Invented for life

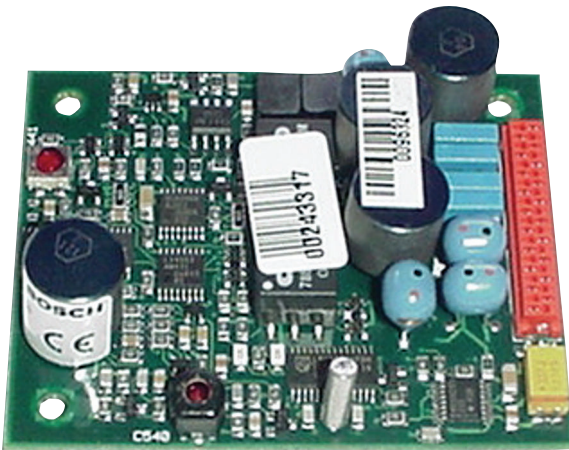

- ▶ Multiple speaker and line monitoring without additional cabling
- ▶ Mounted inside the power amplifier
- ▶ Controls up to 80 speaker and line supervision boards
- ▶ Open-circuit fault detection
- ▶ Compatible with 100 V and 70 V loudspeaker lines

The board controls the communication between the Praesideo system and the loudspeaker or loudspeaker line supervision boards.

The LBB 4440/00 is the supervision control board, monitoring multiple supervision-slave boards (LBB 4441/00 and LBB 4443/00), which are mounted inside the loudspeakers on the line. With these boards working together, it is possible to supervise 16, 64, or up to 80 loudspeakers or loudspeaker lines on a 500-watt amplifier.

Functions

Each amplifier channel in an LBB 442x/10 Power Amplifier unit has an internal mechanical and electrical provision for an LBB 4440/00 control board. Communication between the supervision boards takes place inaudibly over the loudspeaker line, requiring no additional wiring. The audio signals on the lines do not affect communication.

Monitoring can be switched on and off from the configuration software. The monitoring of the presence of supervisor boards is continuous.

Loudspeaker faults are detected and reported within 300 s, and line faults are detected and reported within 100 s.

Interconnections

20-pin connector and flat cable

Certifications and approvals

Safety	acc. to IEC 60065 / EN 60065
Immunity	acc. to EN 55103-2 / EN 50130-4 / EN 50121-4
Emissions	acc. to EN 55103-1 / FCC-47 part 15B
Emergency	acc. to EN 60849 / EN 54-16 / ISO 7240-16
Maritime	acc. to IEC 60945

Region	Certification	
Europe	CPR	EU_CPR
	CE	Declaration of Conformity
	CE	
	CE	COC
	CE	CertAlarm

Region	Certification	
	CE	DOP
	GL	
Poland	CNBOP	

Installation/configuration notes

The following power amplifiers have a provision for installing a supervision control board:

- LBB 4421/10
- LBB 4422/10
- LBB 4424/10
- PRS-1P500
- PRS-2P250
- PRS-4P125

Required loudspeaker line characteristics:

Preferred cable	Single twisted pair, 0.75 mm ² to 1.5 mm ²
Maximum length	1 km (including branches, max. 300 m adjacent to other supervised loudspeaker cables)
Maximum loop resistance	38 ohm
Maximum inductance	750 µH
Minimum total loudspeaker impedance	50 ohm @ 70 kHz (independent of amplifier power)
Maximum capacity	300 nF
Maximum number of supervision boards per amplifier channel	80 @ 500 W 40 @ 250 W 20 @ 125 W
Loudspeaker voltage	70 V, 100 V



Notice

The use of multi-wire cables is not recommended in combination with line supervision, because crosstalk between audio channels may influence the line supervision.



Notice

If the maximum load capacity for the power amplifier output is less than 300 nF, the maximum load capacity of the power amplifier is leading.

Technical specifications

Mechanical

Dimensions (H x W x D)	60 x 50 x 17 mm without bracket (2.4 x 2.0 x 0.7 inch)
Weight	30 g (1 ounce)
Mounting	Internally in the power amplifier Plastic brackets for horizontal and vertical installation included

Environmental

Operating temperature	-5 °C to +55 °C (23 to 131 °F)
Storage temperature	-20 °C to +70 °C (-4 to 158 °F)
Humidity	15% to 90%
Air pressure	600 to 1100 hPa

Ordering information

LBB 4440/00 Supervision Control Board

Line and loudspeaker supervision master PCB for mounting in a Praesideo network connected power amplifier, one board is needed per channel.

Order number **LBB4440/00**

Accessories

LBB 4440/00-CN Supervision Control Board

Line and loudspeaker supervision master PCB for mounting in a Praesideo network connected power amplifier, one board is needed per channel, Chinese version.

Order number **LBB4440/00-CN**

LBB 4441/00 Loudspeaker Supervision Board

Loudspeaker supervision slave PCB for mounting on a loudspeaker, operates with LBB4440/00 for monitoring the integrity of the loudspeaker.

Order number **LBB4441/00**

LBB 4441/00-CN Loudspeaker Supervision Board

Loudspeaker supervision slave PCB for mounting on a loudspeaker, operates with LBB4440/00 for monitoring the integrity of the loudspeaker, Chinese version.

Order number **LBB4441/00-CN**

LBB 4443/00 End of Line (EOL) Supervision Board

Line supervision slave PCB for connecting to the end of a loudspeaker line or the end of a spur, operates with LBB4440/00 to monitor the integrity of the line.

Order number **LBB4443/00**

LBB 4443/00-CN End of Line (EOL) Supervision Board

Line supervision slave PCB for connecting to the end of a loudspeaker line or the end of a spur, operates with LBB4440/00 to monitor the integrity of the line, Chinese version.

Order number **LBB4443/00-CN**

Represented by:

Americas:

Bosch Security Systems, Inc.
12000 Portland Avenue South
Burnsville MN 55337, USA
Phone: +1-800-392-3497
Fax: +1-800-955-6831
audiosupport@us.bosch.com
www.boschsecurity.com

Europe, Middle East, Africa:

Bosch Security Systems B.V.
P.O. Box 80002
5617 BA Eindhoven, The Netherlands
Phone: + 31 40 2577 284
Fax: +31 40 2577 330
emea.securitysystems@bosch.com
www.boschsecurity.com

Asia-Pacific:

Robert Bosch (SEA) Pte Ltd, Security
Systems
11 Bishan Street 21
Singapore 573943
Phone: +65 6571 2808
Fax: +65 6571 2699
apr.securitysystems@bosch.com
www.boschsecurity.asia

China:

Bosch (Shanghai) Security Systems Ltd.
201 Building, No. 333 Fuquan Road
North IBP
Changning District, Shanghai
200335 China
Phone +86 21 22181111
Fax: +86 21 22182398
www.boschsecurity.com.cn

America Latina:

Robert Bosch Ltda Security Systems Division
Via Anhanguera, Km 98
CEP 13065-900
Campinas, Sao Paulo, Brazil
Phone: +55 19 2103 2860
Fax: +55 19 2103 2862
latam.boschsecurity@bosch.com
www.boschsecurity.com